QUICK GUIDE

SAILOR 900 VSAT

Introduction

The SAILOR 900 VSAT system has been configured during installation with all needed satellite and modem profiles. After startup it uses the last selected satellite profile.

To change to another satellite (or modem profile), or change an antenna parameter, connect a PC to the Antenna Control Unit (ACU) and enter the built-in web interface.

Setup and configuration

Set up your PC network connection to use a static IP address:

- IP address: 192.168.0.2
- Subnet mask: 255.255.255.0
- Gateway: 192.168.0.1

Switch on the SAILOR 900 VSAT at the power switch of the ACU.

Connect a PC to LAN port 3 (Rack version: Front LAN connector) of the ACU, use a straight Ethernet cable.

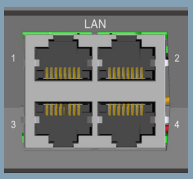

Enter the address **http://192.168.0.1** (default) in your Internet browser. The built-in web interface opens directly with the **DASHBOARD**.

Click **SETTINGS** and activate the new satellite profile.

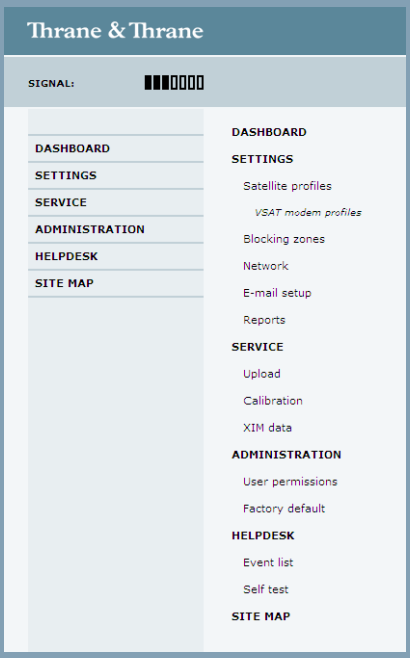

For detailed information about the SAILOR 900 VSAT system see the **SAILOR 900 VSAT Installation & user manual**.

Thrane & Thrane

SAILOR 900 VSAT

Viewing system parameters

Introduction

Use the arrow keys of the Antenna Control Unit (ACU) for navigation. See the menu tree for an overview of the parameters available.

Navigation

Switch on the SAILOR 900 VSAT at the power switch of the ACU.

Use the arrow keys on the keypad to go to a menu.

Press **OK**, then the arrow keys on the keypad to select a parameter.

The current menu name is shown in the upper left corner of the display.

For changing a parameter in the SAILOR 900 VSAT use the built-in web interface of the ACU. See overleaf for a short introduction.

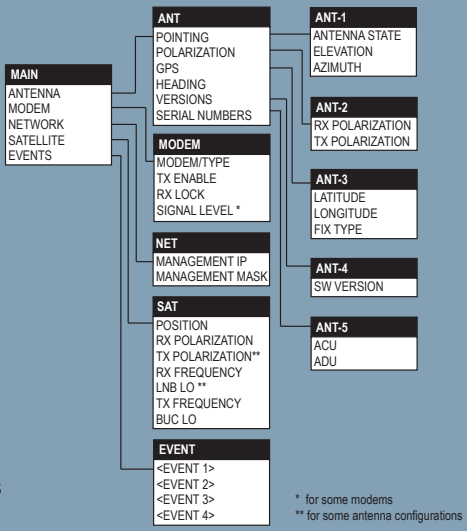

Resetting the ACU

Press and hold the arrow up and down keys until the ACU display shuts down and the ACU reboots.

Wait until the system has rebooted and is operational again. The last active satellite profile will be selected.

For more detailed information about the SAILOR 900 VSAT system see the **SAILOR 900 VSAT Installation & user manual**.

98-133401-B